Connecting wireless motorized furniture

1-Lift up the outside back to have access to the pocket.



4-Connect the battery (A) within the plug of the dual output (B).



2-Locate the 2 plugs.



5- Insert the battery in the pocket and close the outside back. Recharge the battery with the electrical device (C).



3-Take the dual output wire (B) and make the connection with the plugs.



(A)Rechargeable battery



B)Dual output wire



(C)Electrical charging device



ATTENTION

The chair has only one plug and does not include the dual output wire.



Connecting wireless motorized furniture-next page

It is recommended <u>to charge the battery 12 hours before the first use</u>, even if the green LED lights up, to maximize the life of the battery (about 3 years of normal use).



Steps for charging the battery.

*Plug the adapter (charger) to the wall. The light of the adapter will turn green, then connect the battery to the adapter (charger), the light on the adapter (charger) will turn red.

*When the battery is charging, a red light will blink on and off on the battery. There's an 8 second delay.

*When the battery is fully charged, the light on the battery and/or charger will become green.

*When the battery is fully charged, the light on the battery and/or charger will become green.

*The battery, once fully charged, can perform approximately 100 opening and closing operations before having to be charged again.

*It is also recommended to charge the battery after 2 months of non-use.



