

# User guide for a recliner with motorized headrest

**1-Take the bag that contains the connecting items which you will find inside the back behind the furniture.**



**2-Install the back.**



**3-Raise the board. Plug the two wires together.**




**4-Cut the tie-wrap which holds the electrical wire together, located underneath the furniture.**



# User guide for a recliner with motorized headrest-next page

## OPTION 1

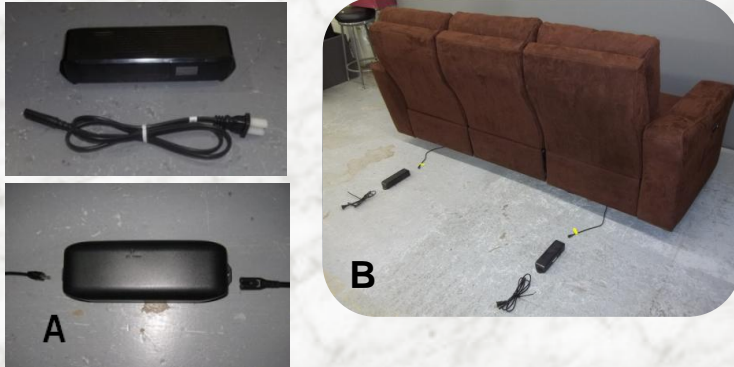

(A & B) Plug the wires to the transformer under the base (contained in the plastic bag inside the back of the furniture).

## OPTION 2



Rechargeable battery

See sheet: Connection of a cordless power motorized furniture.


**Note: For each seat/back with a motorized headrest, a kit including a transformer and an electric cable are provided.**

## For your safety

- \* Do not try to close the footrest if someone or something is under it.
- \* Do not try to get out of the recliner if the footrest is open.
- \* Do not try to get out of the recliner if the footrest is open.
- \* Do not try to get out of the recliner if the footrest is open.

# User guide for a recliner with motorized headrest-next page

## OPTION A: Control button

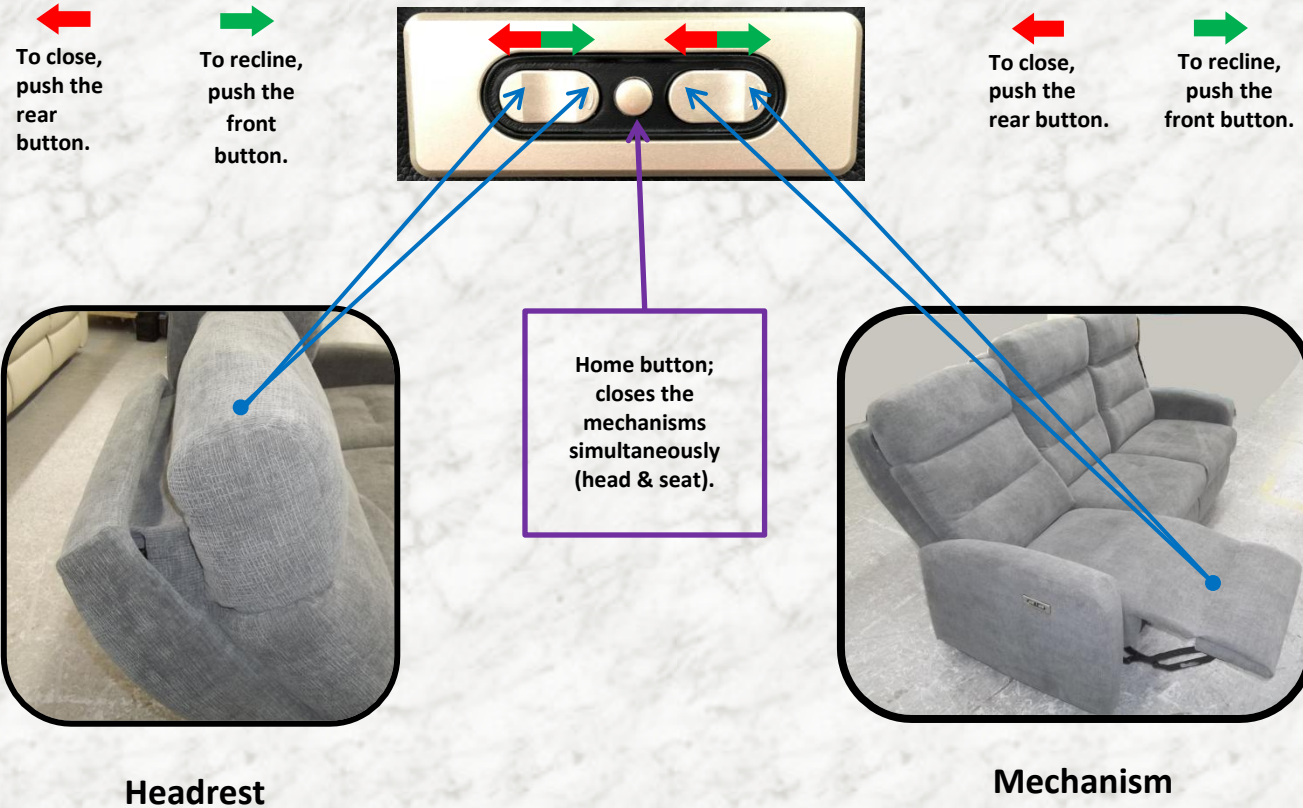

# User guide for a recliner with motorized headrest-next page

## **OPTION B:** Control button integrated into the side of the seat

*(Available only with reclining center furniture).*

