


Backrest features with adjustable ratchet headrest

The back has an adjustable headrest. You can adjust the headrest to different positions for your comfort.


This is made possible by having a ratchet mechanism which is integrated inside the back.

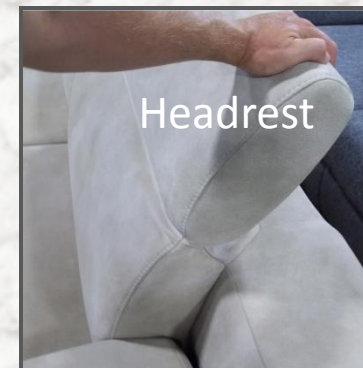

Lift the headrest by pushing forward. You should hear the clicking sound of the mechanism when rotating. Each click, (14 total) indicates a stop to adjust to the desired position.



ATTENTION the mechanism will be deactivated if you push the headrest too far forward.

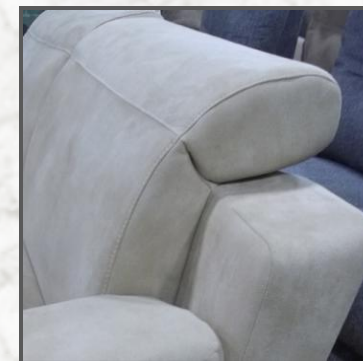

To return the headrest to the closed position, it is important to tilt it completely forward and then backward until you hear the click.

This click indicates that the mechanism is reactivated.

