


Cleopatra only - Controlling the degree of resistance to recline the back

Handle for adjusting of the degree of resistance to recline the back.

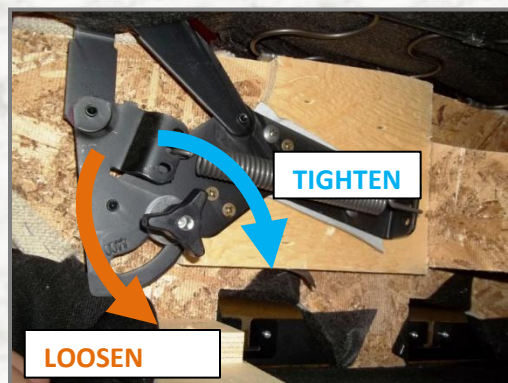

TIGHTEN= more resistance


LOOSEN= less resistance



1- Adjustments are located behind the back of the furniture.



2- Lift up the outside back.

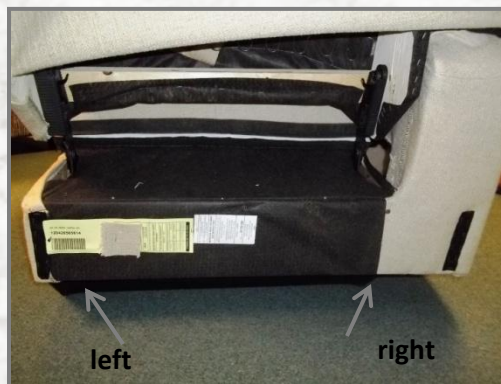

3- Set the two adjustments.



4- The adjustments are hidden by the lining underneath the furniture